

**HUB-SDM5
INSTRUCTION MANUAL**

7/04

COPYRIGHT (c) 2004 CAMPBELL SCIENTIFIC, INC.

WARRANTY AND ASSISTANCE

This equipment is warranted by CAMPBELL SCIENTIFIC (CANADA) CORP. ("CSC") to be free from defects in materials and workmanship under normal use and service for **twelve (12) months** from date of shipment unless specified otherwise. ***** **Batteries are not warranted.** ***** CSC's obligation under this warranty is limited to repairing or replacing (at CSC's option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CSC. CSC will return such products by surface carrier prepaid. This warranty shall not apply to any CSC products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CSC is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. To obtain a Return Merchandise Authorization (RMA), contact CAMPBELL SCIENTIFIC (CANADA) CORP., at (780) 454-2505. An RMA number will be issued in order to facilitate Repair Personnel in identifying an instrument upon arrival. Please write this number clearly on the outside of the shipping container. Include description of symptoms and all pertinent details.

CAMPBELL SCIENTIFIC (CANADA) CORP. does not accept collect calls.

Non-warranty products returned for repair should be accompanied by a purchase order to cover repair costs.



CAMPBELL SCIENTIFIC
C A N A D A C O R P .

11564 - 149 street - edmonton - alberta - T5M 1W7
tel 780.454.2505 fax 780.454.2655

www.campbellsci.ca

HUB-SDM5 Table of Contents

1. Introduction	1
2. HUB-SDM5 Specifications	1
3. General	1
4. Installation and Wiring	1
4.1 Wiring SDM Devices.....	2
4.2 Wiring SDI-12 Devices.....	3
5. Generic Junction Box	4
6. Maintenance	4

HUB-SDM5

1. Introduction

The HUB-SDM5 is a junction box and is used to connect multiple Synchronous Device for Measurement (SDM) or SDI-12 devices/peripherals to a single Campbell Scientific, Inc. datalogger. The HUB-SDM5 consists of an environmental enclosure with six weather resistant bulkhead fittings and five terminal strips.

2. HUB-SDM5 Specifications

Terminal Strips:

Three spring-loaded guillotine connections per terminal; two terminals in common through a jumper creates five banks

Operating Temperature:

-55°C to +85°C

Operating Humidity:

Noncondensing 0% – 95%

Dimensions:

Length: 17.8 cm (7.0")
Width: 19.7 cm (7.75")
Depth: 13.3 cm (5.25")

Weight:

0.82 kg (1.8 lbs)

3. General

Inside the HUB-SDM5 enclosure are five pairs of terminal strips. These terminal strips are mounted on a DIN rail and an orange end cap separates each pair. Each pair of terminal strips is connected to each other by means of a jumper. The terminal strips are used to connect up to six wires to each other. The wires are secured to the terminal by a spring-loaded guillotine.

4. Installation and Wiring

A U-bolt is used to mount the HUB-SDM5 to a 1.25 inch NPT pipe.

The spring-loaded guillotines are opened with a small flat blade (2.5 X 50 mm) screwdriver (p/n 8125). Orient the screwdriver blade so that the blade edge is perpendicular to the orange separators. Gently insert the small flat blade

screwdriver into the square slot located next to the circular wire port until it bottoms out. For the cluster of four wire ports located on the left hand side of the HUB-SDM5, the guillotine release slot is located to the right of the wire port. For the wire ports on the right hand side of the HUB-SDM5, the guillotine release slot is located to the left of the wire port. Once the screwdriver has been completely inserted and has bottomed out, firmly press the screwdriver down until the guillotine snaps open. Insert and hold the wire as the screwdriver is removed.

4.1 Wiring SDM Devices

Before connecting the SDM signal cable to the terminals, strip the wire insulation back to expose ¼ inch of bare wire. Feed the cable through the bulkhead fitting. Neatly separate the five wires into the following order, SDM data, SDM clock, SDM enable, SDM ground, and SDM shield.

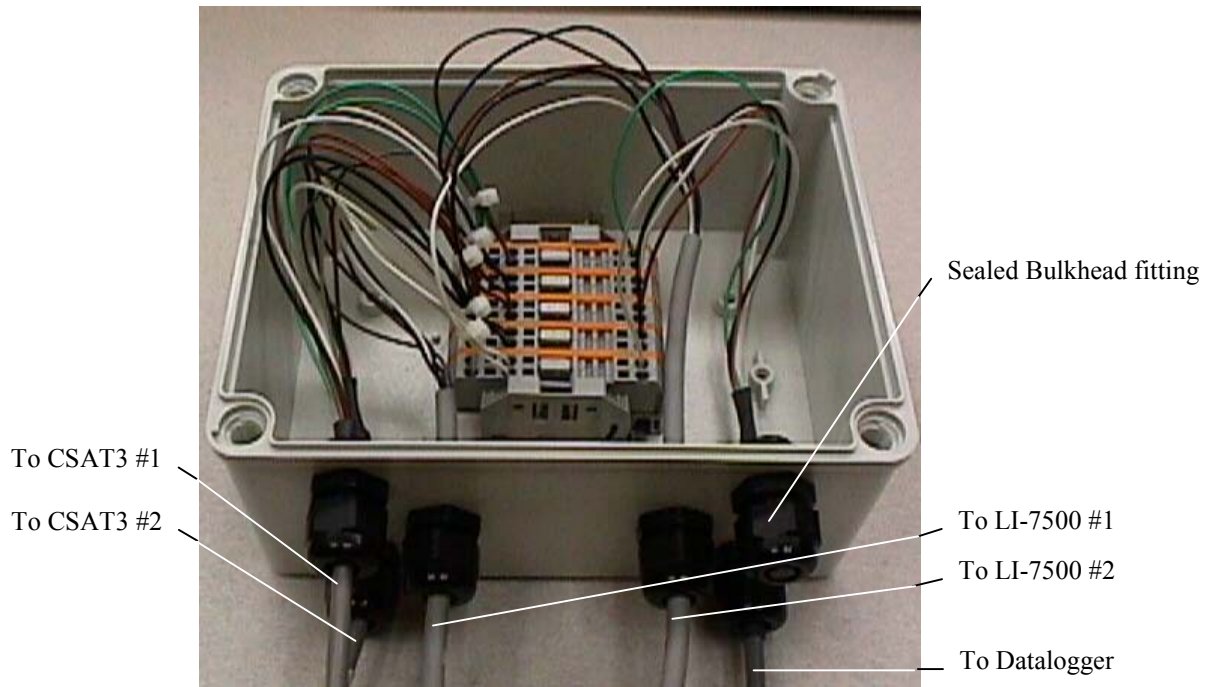


FIGURE 1. HUB-SDM5 connecting four SDM devices to a datalogger.

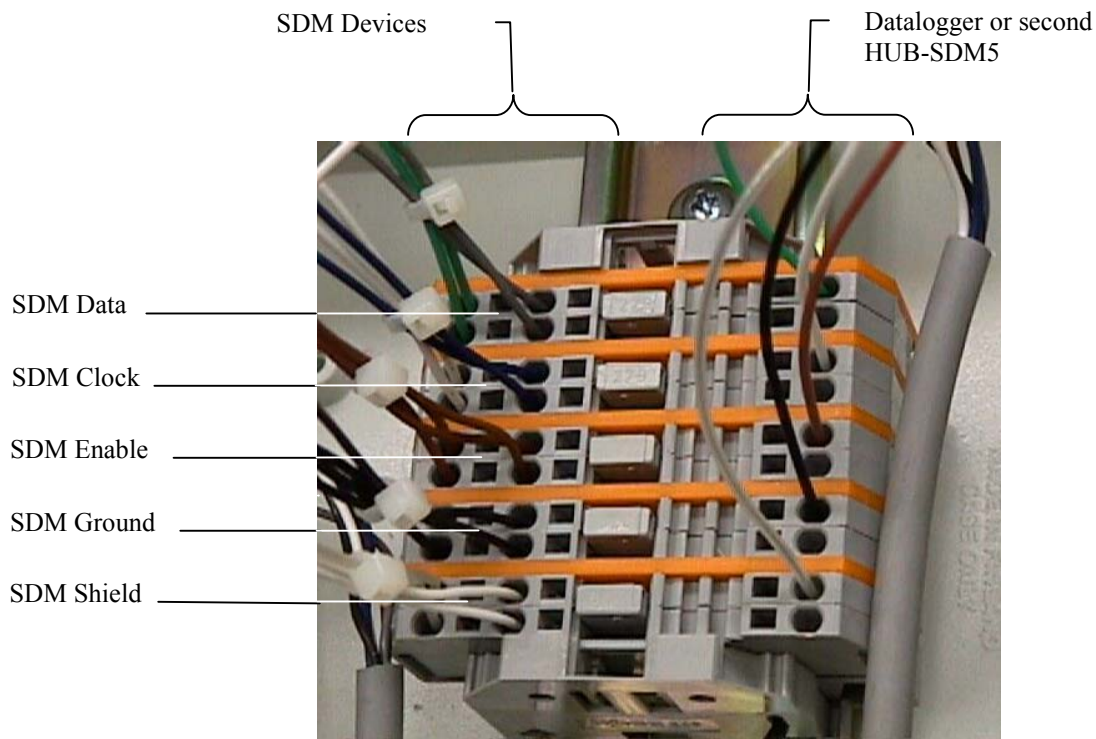


FIGURE 2. HUB-SDM5 terminal strip connecting four SDM devices to a datalogger.

4.2 Wiring SDI-12 Devices

Before connecting the SDI-12 signal/power cable to the terminals, strip the wire insulation back to expose ¼ inch of bare wire. Feed the cable through the bulkhead fitting. Neatly separate the four wires into the following order, SDI-12 data, SDI-12 power, SDI-12 ground, SDI-12 shield.

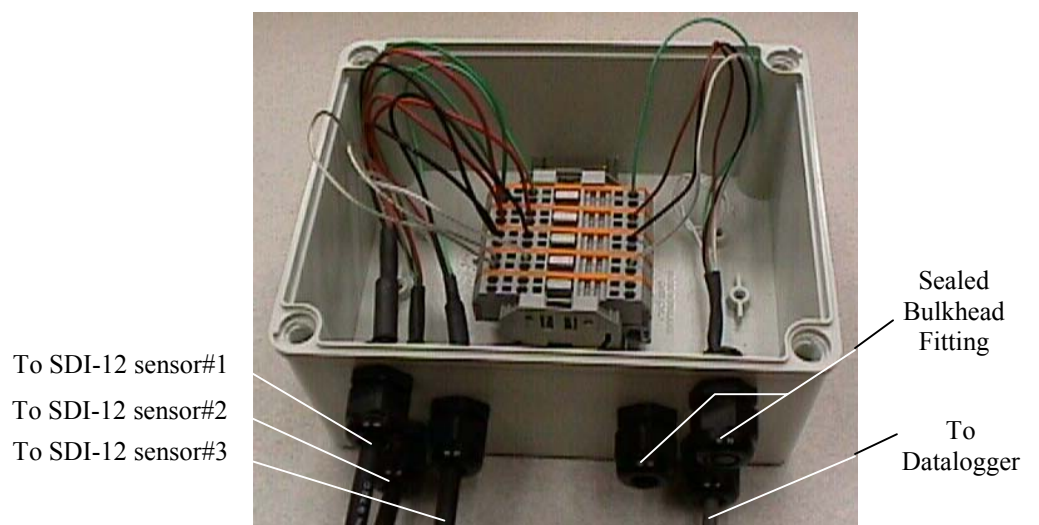


FIGURE 3. HUB-SDM5 connecting three SDI-12 devices to a datalogger.

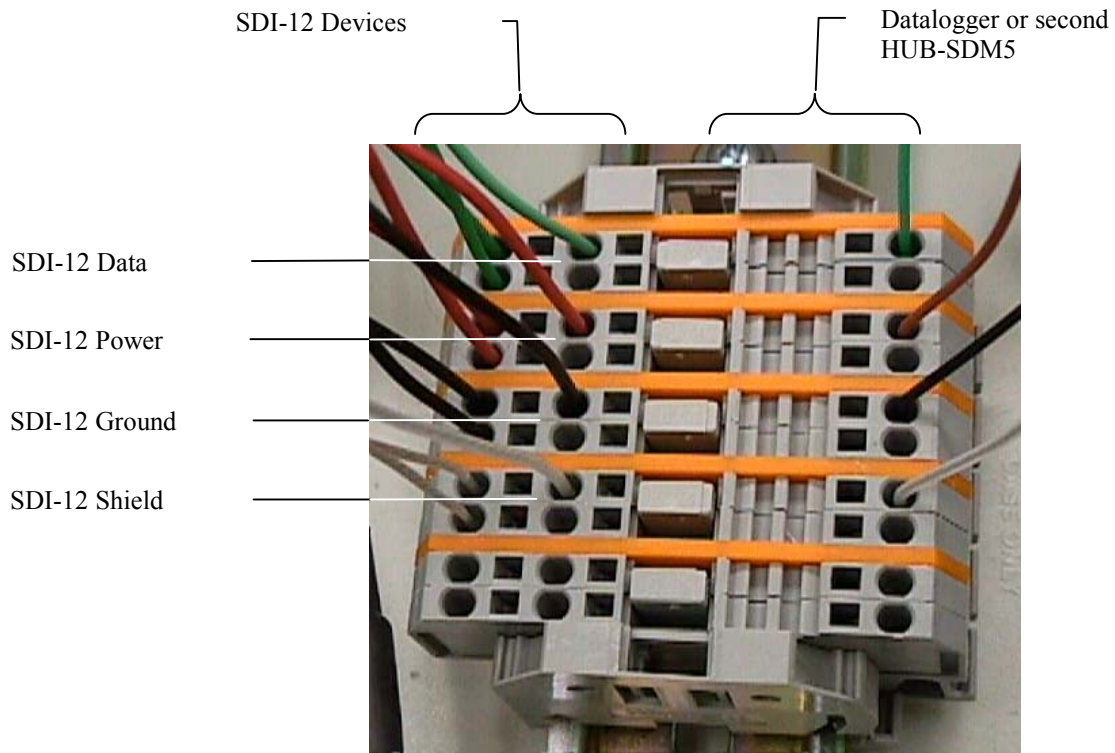


FIGURE 4. HUB-SDM5 terminal strip with SDI-12 devices connected to a datalogger.

5. Generic Junction Box

The HUB-SDM5 can be used as a generic junction box. In its default configuration, six, five conductor cables can be connected to each other. Three, ten conductor cables can be connected to each other by removing the jumper between the terminal strips. Use a small screwdriver to pry the jumper out.

6. Maintenance

There are no user-serviceable parts in the HUB-SDM5. Make sure that all unused bulkhead fittings are sealed with a plug and that the lid is tightly fastened.