

# INSTRUCTION MANUAL



## *HMP50 Temperature and Relative Humidity Probe*

Revision: 6/06



Copyright © 1995-2006  
Campbell Scientific, Inc.

## WARRANTY AND ASSISTANCE

This equipment is warranted by CAMPBELL SCIENTIFIC (CANADA) CORP. ("CSC") to be free from defects in materials and workmanship under normal use and service for **twelve (12) months** from date of shipment unless specified otherwise. \*\*\*\*\* **Batteries are not warranted.** \*\*\*\*\* CSC's obligation under this warranty is limited to repairing or replacing (at CSC's option) defective products. The customer shall assume all costs of removing, reinstalling, and shipping defective products to CSC. CSC will return such products by surface carrier prepaid. This warranty shall not apply to any CSC products which have been subjected to modification, misuse, neglect, accidents of nature, or shipping damage. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for a particular purpose. CSC is not liable for special, indirect, incidental, or consequential damages.

Products may not be returned without prior authorization. To obtain a Return Merchandise Authorization (RMA), contact CAMPBELL SCIENTIFIC (CANADA) CORP., at (780) 454-2505. An RMA number will be issued in order to facilitate Repair Personnel in identifying an instrument upon arrival. Please write this number clearly on the outside of the shipping container. Include description of symptoms and all pertinent details.

CAMPBELL SCIENTIFIC (CANADA) CORP. does not accept collect calls.

Non-warranty products returned for repair should be accompanied by a purchase order to cover repair costs.



**CAMPBELL SCIENTIFIC**  
C A N A D A C O R P .

11564 - 149 street - edmonton - alberta - T5M 1W7  
tel 780.454.2505 fax 780.454.2655

[www.campbellsci.ca](http://www.campbellsci.ca)

# HMP50 Table of Contents

---

PDF viewers note: These page numbers refer to the printed version of this document. Use the Adobe Acrobat® bookmarks tab for links to specific sections.

<b>1. General</b> .....	1
<b>2. Specifications</b> .....	1
2.1 Temperature Sensor .....	1
2.2 Relative Humidity Sensor .....	2
<b>3. Installation</b> .....	2
<b>4. Wiring</b> .....	6
<b>5. Example Programs</b> .....	6
5.1 Example for CR1000 .....	7
5.2 Example for CR10X .....	7
<b>6. Long Lead Lengths</b> .....	8
<b>7. Absolute Humidity</b> .....	9
<b>8. Maintenance</b> .....	11
<b>9. References</b> .....	11

## **Figures**

1. HMP50 and 41301 Radiation Shield on a CM6/CM10 Tripod Mast .....	3
2. HMP50 and 41303-5A Radiation Shield .....	4
3. HMP50 and 41003 Radiation Shield on a CM6/CM10 Tripod Mast .....	4
4. Radiation Shield, HMP50, and 41381 Adapter .....	5
5. HMP50 Wiring .....	5

## **Tables**

1. Datalogger Connections .....	6
2. Calibration for Temperature .....	6
3. Calibration for Relative Humidity .....	6
4. Wiring for CR1000 and CR10X Examples .....	7
5. CR10(X) Wiring for Example 1 .....	9



# ***HMP50 Temperature and Relative Humidity Probe***

---

## **1. General**

The HMP50 Temperature and Relative Humidity probe contains a Platinum Resistance Temperature detector (PRT) and a Vaisala INTERCAP® capacitive relative humidity sensor.

The -L option on the model HMP50 Temperature and Relative Humidity probe (HMP50-L) indicates that the cable length is user specified. This manual refers to the sensor as the HMP50.

## **2. Specifications**

Operating Temperature: -25°C to +60°C

Storage Temperature: -40°C to +80°C

Probe Length: 6.8 cm (2.66 in.)

Probe Body Diameter: 1.2 cm (0.47 in.)

Filter: 0.2 µm Teflon membrane

Filter Diameter: 1.2 cm (0.47 in.)

Housing Material: ABS Plastic

Power Consumption: <2 mA

Supply Voltage: 7 to 28 VDC

Settling Time after power is switched on: 1 second


### **2.1 Temperature Sensor**

Sensor: 1000 Ω PRT, DIN 43760B

Temperature Measurement Range: -25°C to +60°C

Temperature Output Signal range: 0 to 1.0 VDC

Temperature Accuracy:

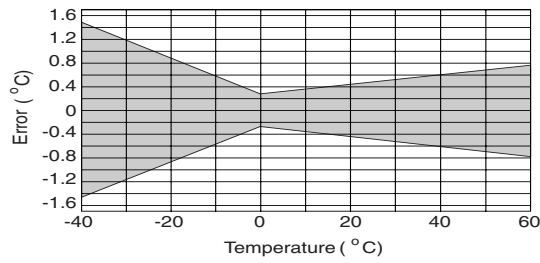

## 2.2 Relative Humidity Sensor

Sensor: INTERCAP®

Relative Humidity Measurement Range: 0 to 98% non-condensing


RH Output Signal Range: 0 to 1.0 VDC

Accuracy at 20°C

±3% RH (0 to 90% Relative Humidity)

±5% RH (90 to 98% Relative Humidity)

Temperature Dependence of Relative Humidity Measurement:

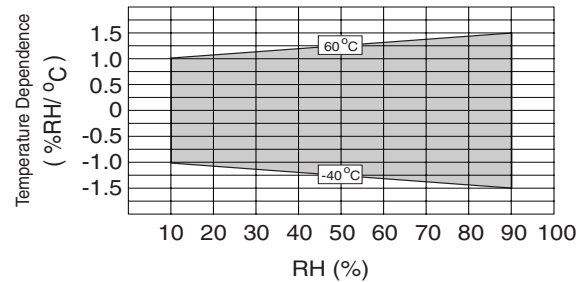

Typical Long Term Stability: Better than 1% RH per year

Response Time (at 20°C, 90% response to a steep change in humidity):

15 seconds with membrane filter

## 3. Installation

The HMP50 must be housed inside a solar radiation shield when used in the field. The 41303-5A 6-Plate Radiation Shield (Figures 1 and 2) mounts to a tripod mast, UT10 tower leg, or CM202, CM204, or CM206 crossarm. The HMP50 is held within the 41303-5A by a mounting clamp (Figure 2).

The UT6P 6-plate Radiation Shield mounts to a UT10, UT20, or UT30 tower with the UT018 horizontal mounting arm.

**NOTE**

---

The black outer jacket of the cable is Santoprene® rubber. This compound was chosen for its resistance to temperature extremes, moisture, and UV degradation. However, this jacket will support combustion in air. It is rated as slow burning when tested according to U.L. 94 H.B. and will pass FMVSS302. Local fire codes may preclude its use inside buildings.

---



*FIGURE 1. HMP50 and 41303-5A Radiation Shield on a Tripod Mast*

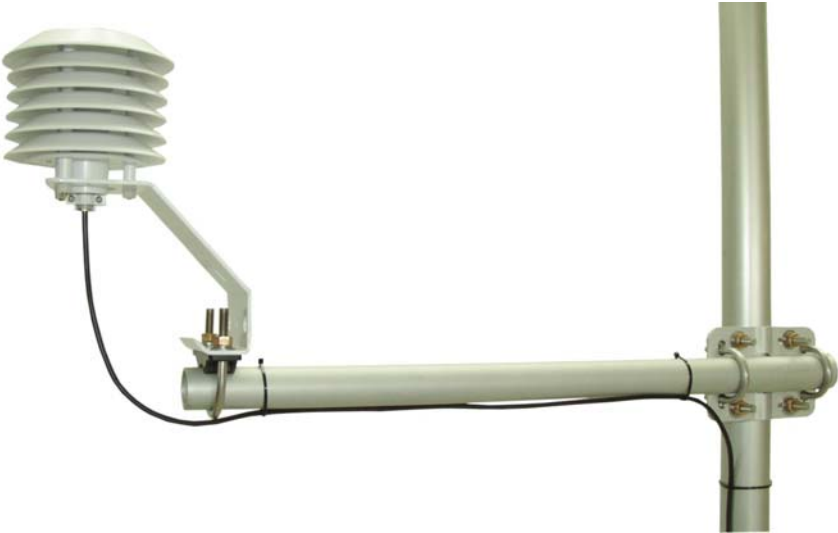


FIGURE 2. HMP50 and 41303-5A Radiation Shield on a CM202 Crossarm

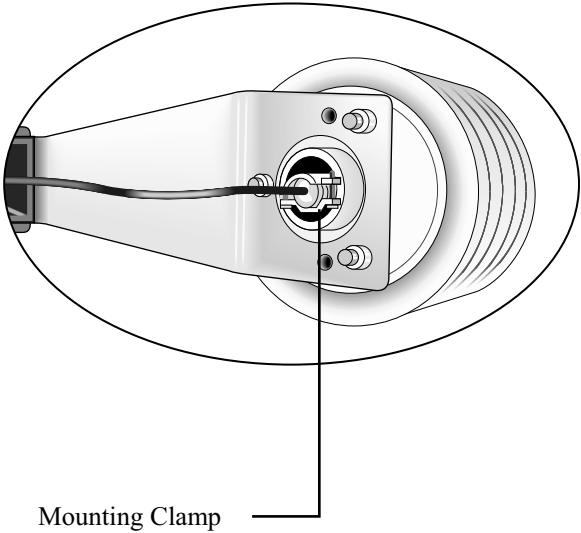


FIGURE 3. HMP50 and 41303-5A Radiation Shield

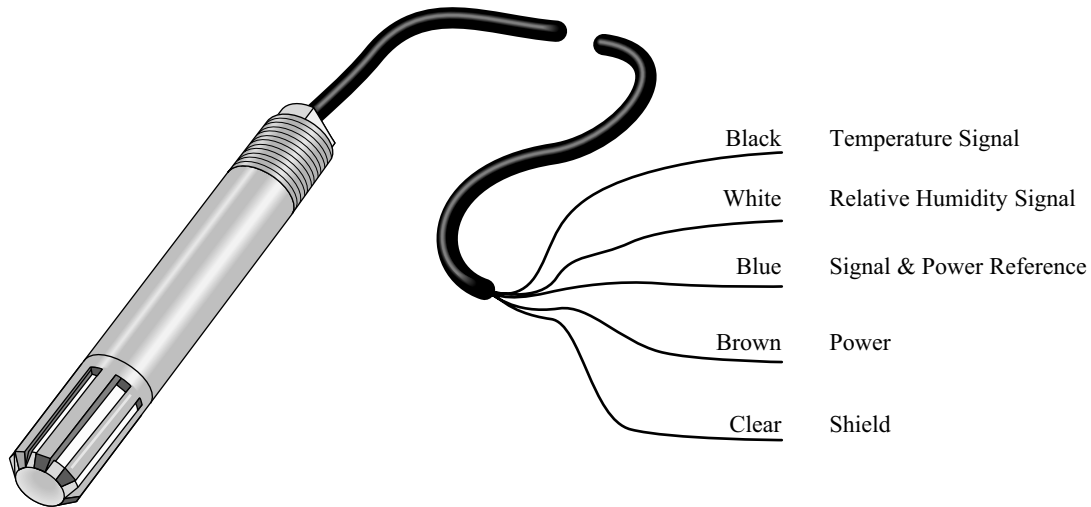


FIGURE 4. HMP50 Wiring

Description	Color	CR800, CR3000, CR200, CR23X, CR1000	CR10(X), CR510	21X, CR7
Temperature	Black	Single-Ended Input	Single-Ended Input	Single-Ended Input
Relative Humidity	White	Single-Ended Input	Single-Ended Input	Single-Ended Input
Signal & Power Reference	Blue	G	G	⊕
Power	Brown	12 V	12 V	12 V
Shield	Clear	⊕	G	⊕

## 4. Wiring

Connections to Campbell Scientific dataloggers are given in Table 1. The probe is measured by two single-ended analog input channels, one for temperature and one for relative humidity.

### CAUTION

Always connect the Blue lead to the datalogger first, followed by the Black, White, and Clear leads. Connect the Brown (Power) lead last.

## 5. Example Programs

This section is for users who write their own datalogger programs. A datalogger program to measure this sensor can be created using Campbell Scientific's Short Cut Program Builder Software. You do not need to read this section to use Short Cut.

The temperature and relative humidity signals from the HMP50 are measured using two single-ended analog measurements (Instruction 1).

The probe output scale is 0 to 1000 millivolts for the temperature range of -40°C to +60°C and for the relative humidity range of 0 to 100%. Tables 2 and 3 provide calibration information for temperature and relative humidity.

**TABLE 2. Calibration for Temperature**

Units	Multiplier (degrees mV <sup>-1</sup> )	Offset (degrees)
Celsius	0.1	-40
Fahrenheit	0.18	-40

**TABLE 3. Calibration for Relative Humidity**

Units	Multiplier (% mV <sup>-1</sup> )	Offset (%)
Percent	0.1	0
Fraction	0.001	0

**TABLE 4. Wiring for CR1000 and CR10X Examples**

Description	Color	CR1000	CR10(X)
Temperature	Black	SE 1	SE 3 (2H)
Relative Humidity	White	SE 2	SE 4 (2L)
Signal & Power Reference	Blue	G	G
Power	Brown	12 V	12 V
Shield	Clear	⊕	G

## 5.1 Example for CR1000

```
'CR1000
'Created by SCWIN (2.1)

Public AirTC
Public RH

DataTable(Table1,True,-1)
    DataInterval(0,60,Min,0)
    Average(1,AirTC,IEEE4,0)
    Sample(1,RH,IEEE4)
EndTable
```

```

BeginProg
  Scan(5,Sec,1,0)
    'HMP50 Temperature & Relative Humidity Sensor measurements AirTC and RH:
    VoltSE(AirTC,1,mV2500,1,0,0,_60Hz,0.1,-40.0)
    VoltSE(RH,1,mV2500,2,0,0,_60Hz,0.1,0)
    If (RH>100) And (RH<108) Then RH=100
    CallTable(Table1)
  NextScan
EndProg

```

## 5.2 Example for CR10X

```

;Measure the HMP50 temperature.
;
01: Volt (SE) (P1)
  1: 1      Reps
  2: 5      2500 mV Slow Range      ;CR510 (2500 mV); CR23X (1000 mV); 21X,
                                     CR7 (5000 mV)
  3: 3      SE Channel              ;Black wire (SE 3), Blue wire (G)
  4: 1      Loc [ T_C      ]
  5: .1     Mult                    ;See Table 2 for alternate multipliers
  6: -40    Offset                  ;See Table 2 for alternate offsets

;Measure the HMP50 relative humidity.
;
02: Volt (SE) (P1)
  1: 1      Reps
  2: 5      2500 mV Slow Range      ;CR510 (2500 mV); CR23X (1000 mV); 21X,
                                     CR7 (5000 mV)
  3: 4      SE Channel              ;White wire (SE 4), Blue wire (G)
  4: 3      Loc [ RH_pct  ]
  5: .1     Mult                    ;See Table 3 for alternate multipliers
  6: 0      Offset

;Limit the maximum relative humidity to 100%.
;
03: If (X<=>F) (P89)
  1: 3      X Loc [ RH_pct  ]
  2: 3      >=
  3: 100    F
  4: 30     Then Do

04: Z=F (P30)
  1: 100    F
  2: 0      Exponent of 10
  3: 3      Z Loc [ RH_pct  ]

05: End (P95)

```

## 6. Long Lead Lengths

Long lead lengths cause errors in the measured temperature and relative humidity. The approximate error in temperature and relative humidity is 0.52°C and 0.52% per 100 feet of cable length, respectively.

When long lead lengths are required and the above errors in temperature and relative humidity are unacceptable, use the HMP45C temperature and humidity probe.

Understanding the following details are not required for the general operation of the HMP50 with Campbell Scientific's dataloggers. The signal reference and the power ground (black) are the same lead in the HMP50. When the HMP50 temperature and relative humidity are measured, both the signal reference and power ground are connected to ground at the datalogger. The signal reference/power ground lead serves as the return path for 12 V. There will be a voltage drop along this lead because the wire itself has resistance. The HMP50 draws approximately 2 mA when it is powered. The wire used in the HMP50 (P/N 18159) has resistance of 26.2 Ω/1000 feet. Using Ohm's law, the voltage drop ( $V_d$ ), along the signal reference/power ground lead, is given by Eq. (1).

$$\begin{aligned} V_d &= I * R \\ &= 2 \text{ mA} * 26.2 \text{ } \Omega / 1000 \text{ ft} \\ &= 52.4 \text{ mV} / 1000 \text{ ft} \end{aligned} \quad (1)$$

This voltage drop will raise the apparent temperature and relative humidity because the difference between the signal and signal reference, at the datalogger, has increased by  $V_d$ . The approximate error in temperature and relative humidity is 0.35°C and 0.35% per 100 feet of cable length, respectively.

## 7. Absolute Humidity

The HMP50 measures the relative humidity. Relative humidity is defined by the equation below:

$$RH = \frac{e}{e_s} * 100 \quad (2)$$

where RH is the relative humidity,  $e$  is the vapor pressure in kPa, and  $e_s$  is the saturation vapor pressure in kPa. The vapor pressure,  $e$ , is an absolute measure of the amount of water vapor in the air and is related to the dew point temperature. The saturation vapor pressure is the maximum amount of water vapor that air can hold at a given air temperature. The relationship between dew point and vapor pressure, and air temperature and saturation vapor pressure are given by Goff and Gratch (1946), Lowe (1977), and Weiss (1977).

When the air temperature increases, so does the saturation vapor pressure. Conversely, a decrease in air temperature causes a corresponding decrease in

saturation vapor pressure. It follows then from Eq. (2) that a change in air temperature will change the relative humidity, without causing a change in absolute humidity.

For example, for an air temperature of 20°C and a vapor pressure of 1.17 kPa, the saturation vapor pressure is 2.34 kPa and the relative humidity is 50%. If the air temperature is increased by 5°C and no moisture is added or removed from the air, the saturation vapor pressure increases to 3.17 kPa and the relative humidity decreases to 36.9%. After the increase in air temperature, the air can hold more water vapor. However, the actual amount of water vapor in the air has not changed. Thus, the amount of water vapor in the air, relative to saturation, has decreased.

Because of the inverse relationship between relative humidity and air temperature, finding the mean relative humidity is meaningless. A more useful quantity is the mean vapor pressure. The mean vapor pressure can be computed on-line by the datalogger (Example 1).

Description	Color	CR10(X)
Temperature	Black	SE 3 (2H)
Relative Humidity	White	SE 4 (2L)
Signal & Power Reference	Blue	G
Power	Brown	12 V
Shield	Clear	G

**Example 1. Sample CR10(X) Program that Computes Vapor Pressure and Saturation Vapor Pressure**

```

;Measure the HMP50 temperature.
;
01: Volt (SE) (P1)
  1: 1      Reps
  2: 5      2500 mV Slow Range      ;CR510 (2500 mV); CR23X (1000 mV); 21X,
                                     CR7 (5000 mV)
  3: 3      SE Channel              ;Black wire (SE 3), Blue wire (G)
  4: 1      Loc [ T_C      ]
  5: .1     Mult                    ;See Table 2 for alternate multipliers
  6: -40    Offset                  ;See Table 2 for alternate offsets

;Measure the HMP50 relative humidity.
;
02: Volt (SE) (P1)
  1: 1      Reps
  2: 5      2500 mV Slow Range      ;CR510 (2500 mV); CR23X (1000 mV); 21X,
                                     CR7 (5000 mV)
  3: 4      SE Channel              ;White wire (SE 4), Blue wire (G)
  4: 2      Loc [ RH_frac  ]
  5: .001   Mult                    ;See Table 3 for alternate multipliers
  6: 0      Offset

```

```

;Limit the maximum value of relative humidity
;to 1 (expressed as a fraction).
;
03: If (X<=>F) (P89)
  1: 2      X Loc [ RH_frac ]
  2: 3      >=
  3: 1      F
  4: 30     Then Do

04: Z=F (P30)
  1: 1      F
  2: 0      Exponent of 10
  3: 2      Z Loc [ RH_frac ]

05: End (P95)

;Compute the saturation vapor pressure in kPa.
;The temperature must be in degrees Celsius.
;
06: Saturation Vapor Pressure (P56)
  1: 1      Temperature Loc [ T_C ]
  2: 3      Loc [ e_sat ]

;Compute the vapor pressure in kPa.
;Relative humidity must be a fraction.
;
07: Z=X*Y (P36)
  1: 3      X Loc [ e_sat ]
  2: 2      Y Loc [ RH_frac ]
  3: 4      Z Loc [ e ]

```

## 8. Maintenance

The HMP50 Probe requires minimal maintenance. Check monthly to make sure the radiation shield is free from debris. The white screen at the tip of the probe should also be checked for contaminants.

When installed in close proximity to the ocean or other bodies of salt water (e.g., Great Salt Lake), a coating of salt (mostly NaCl) may build up on the radiation shield, sensor, filter and even the chip. NaCl has an affinity for water. The humidity over a saturated NaCl solution is 75%. A buildup of salt on the filter or chip will delay or destroy the response to atmospheric humidity.

The filter can be rinsed gently in distilled water. If necessary, the chip can be removed and rinsed as well. Do not scratch the chip while cleaning.

The offset and gain on the HMP50 electronics can not be adjusted as part of a recalibration. Replace the RH chip as needed.

## 9. References

- Goff, J. A. and S. Gratch, 1946: Low-pressure properties of water from -160° to 212°F, *Trans. Amer. Soc. Heat. Vent. Eng.*, **51**, 125-164.
- Lowe, P. R., 1977: An approximating polynomial for the computation of saturation vapor pressure, *J. Appl. Meteor.*, **16**, 100-103.
- Weiss, A., 1977: Algorithms for the calculation of moist air properties on a hand calculator, *Amer. Soc. Ag. Eng.*, **20**, 1133-1136.





## **Campbell Scientific Companies**

---

### **Campbell Scientific, Inc. (CSI)**

815 West 1800 North  
Logan, Utah 84321  
UNITED STATES  
[www.campbellsci.com](http://www.campbellsci.com)  
[info@campbellsci.com](mailto:info@campbellsci.com)

### **Campbell Scientific Africa Pty. Ltd. (CSAf)**

PO Box 2450  
Somerset West 7129  
SOUTH AFRICA  
[www.csafrica.co.za](http://www.csafrica.co.za)  
[sales@csafrica.co.za](mailto:sales@csafrica.co.za)

### **Campbell Scientific Australia Pty. Ltd. (CSA)**

PO Box 444  
Thuringowa Central  
QLD 4812 AUSTRALIA  
[www.campbellsci.com.au](http://www.campbellsci.com.au)  
[info@campbellsci.com.au](mailto:info@campbellsci.com.au)

### **Campbell Scientific do Brazil Ltda. (CSB)**

Rua Luisa Crapsi Orsi, 15 Butantã  
CEP: 005543-000 São Paulo SP BRAZIL  
[www.campbellsci.com.br](http://www.campbellsci.com.br)  
[suporte@campbellsci.com.br](mailto:suporte@campbellsci.com.br)

### **Campbell Scientific Canada Corp. (CSC)**

11564 - 149th Street NW  
Edmonton, Alberta T5M 1W7  
CANADA  
[www.campbellsci.ca](http://www.campbellsci.ca)  
[dataloggers@campbellsci.ca](mailto:dataloggers@campbellsci.ca)

### **Campbell Scientific Ltd. (CSL)**

Campbell Park  
80 Hathern Road  
Shepshed, Loughborough LE12 9GX  
UNITED KINGDOM  
[www.campbellsci.co.uk](http://www.campbellsci.co.uk)  
[sales@campbellsci.co.uk](mailto:sales@campbellsci.co.uk)

### **Campbell Scientific Ltd. (France)**

Miniparc du Verger - Bat. H  
1, rue de Terre Neuve - Les Ulis  
91967 COURTABOEUF CEDEX  
FRANCE  
[www.campbellsci.fr](http://www.campbellsci.fr)  
[campbell.scientific@wanadoo.fr](mailto:campbell.scientific@wanadoo.fr)

### **Campbell Scientific Spain, S. L.**

Psg. Font 14, local 8  
08013 Barcelona  
SPAIN  
[www.campbellsci.es](http://www.campbellsci.es)  
[info@campbellsci.es](mailto:info@campbellsci.es)